How to program BMW CAS3 key?



Click on "Read Key Info" 2 lenovo 12 1106 Key の地 I C Key3 C Kew etti C Key! C Key6 © Key7 **.*** C Key8 C Key9 GDI 1.0.02 C Key10 G SDI OBD is connecti KWP-CAN 100ki P 🔞 ĉ 🚞 🛛 🗢 🕻 🔚 😁

The data was read successfully, get prompt "Please remove the key from the ignition"



Finally, the key information was successfully read, and save it to the desktop.



			Key Macth	CAS Version Number	CAS Versio	n Re	mote frequency	Tooth code			No. of Concession, name	
1 360574#	#留家 Camtasia 9	Key Number	Key Info	914/22/	CAS3		N	Remote Info	key inside	Ignition Note	Summer of	
			Key ID	Password	Cfg Page	Кеу Туре	Status	Remote ID	Remote Password	Synchronization code	-	
		🗇 Key1	7C6E2712	CD691378EA35	CEED7D59	pcf7936	Enable	7381	C0E586525C53	B2197969	Second Street	
		© Key2	4485F896	0C1DBA673E9B	C8D11ABD	Remote Key	Enable	3A08	3F994SEDB4F5	4EADFB98		-
WPS3	X77 301715303638	🗇 КеуЗ	FFFFFFFF	D20182830A98	C86A8190	Unuse	Enable	E61E	CDEEA4A5E238	E757A467		
		🔿 Key4	FFFFFFF	1A540222864E	C87985D0	Unuse	Enable	BD42	E1123A813039	9FBE646C		
2		© Key5	FFFFFFFF	1CA44D4EF343	C870FB72	Unuse	Enable	CCB4	89ACF6A8D3D4	481C081E	>	
WPS	富示 CG软件升级 注意事项	🔿 Keyő	FFFFFFF	9DAF88E5FAA1	C8B4C8BE	Unuse	Enable	7F8D	18FDC5C836CC	85451413		-)
		© Key7	FFFFFFF	617784581D58	C83285D7	Unuse	Enable	22EE	24CFF2EE50B3	48AAF307	5	C
2		C Key8	230A0697	9913C63E8F9F	C80B265E	Keyless	Enable	8665			501	-12
th WPS# -	表格 CG100 启动	🔿 Key9	FFFFFFFF	0622A828219E	C8D61812	Unuse	Enable	98A3	1		-	
	3	🔿 Key10	FFFFFFF	0EE64E6D64A7	C831A685	Unuse	Enable	8290	\wedge		di Di	
02 CGB	07 0)	Read Key Info	Generate de	aler key Syn DME	Syn ELV	Restore	key bit Unlo	ck Key Enable	Y	-		
0 HE 2017-7- 3 HE 2017-7- 3 HE 9147221	-5	KWP-CAN 10 Security auth Sofety certifi Reading data The data was Security auth Sofety certifi The key infor The key infor	kbps connection entication is in p ation through read successfu entication is in p ation through mation is being mation was succ	is successful rogress rogress ead esdully read				E				

r n