


## Digimaster-II upgrade instruction


- 1、 Connect your computer with Internet
- 2、 Click “ special function, then choose “ host serve” to make the Digimastet-II in the state of host service
- 3、 link Digimaster-II with your computer by USB cable
- 4、 Run the software program of Digimaster-II located in the desktop of your computer




- 5、 Click “Service/Setup” button in this dialog box , and choose “Product upgrade”

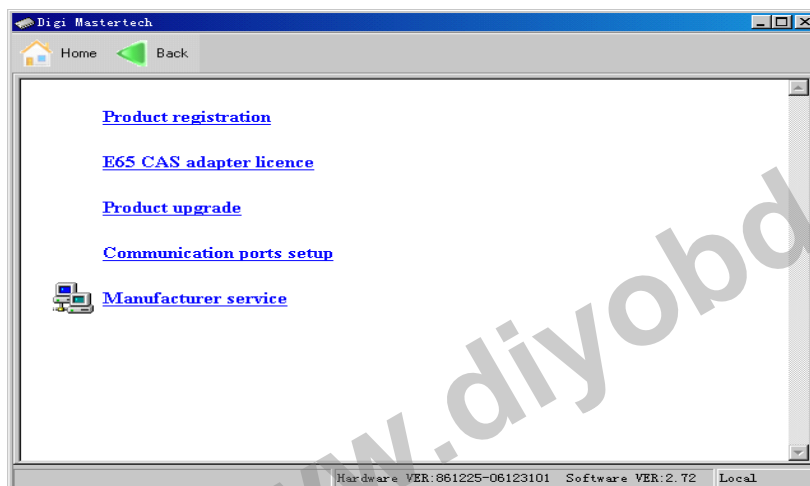

- 6、 Choose first box “upgrade in internet web” and select language **English** in “Wizard Language”.

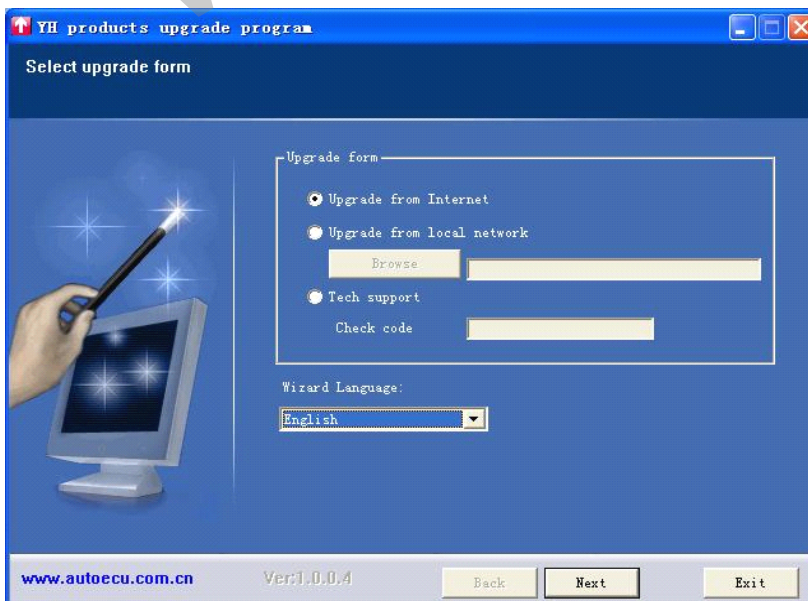

.two items of Digimaster-II

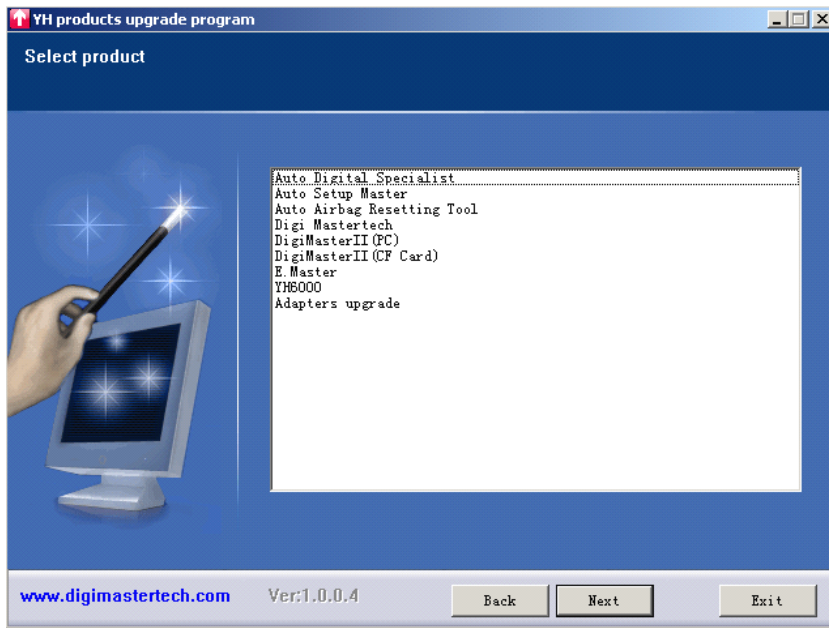

- (1) DigiMasterII (CF Card)
- (2) DigiMasterII(PC)

Firstly we need upgrade Digimaster II CF Card. Then click “NEXT”.

7. Power off Digimaster II, and remove CF card from digimaster II, then choose “typical”.





8、 Re-plug CFcard in Digimaster II ,and power on digimaster II,then digimaster II will upgrade itself automatically.

9、 Repeat the above steps from 4 to 7

10、 After CF card is done, we next upgrade DigiMaster II PC software. Choose “DigiMaster II (PC)”and click “next” until complete it.(Att: this step we need keep DIGI2 linking with your computer which is in state of host service ).