

F502 Upgrade Operation Manual



Image 1

Long-press **[Enter]**

1. Long-press “Enter” of Main Unit while insert it with USB cable. See Image 1.



Image 2

USB Interface

2. Long-press “Enter” of Main Unit while insert it with USB cable. See Image 2.

3 Indicators light up



Image 3

3. Long-press “Enter” of Main Unit while insert it with USB cable. See Image 3.