

Instruction of LT20 series boards

| Items | Product Number | Board items | Original SW | Frequency(MHz) | Modulation Mode |
|-------|----------------|-------------|----------------|----------------|-----------------|
| 1 | LT20-01J0 | 01 | 3370 | 314.35 | ASK |
| 2 | LT20-02J2 | 02 | 5801 | 314.35 | FSK |
| 3 | LT20-03A0 | 03 | 0780 | 433.92 | ASK |
| 4 | LT20-04NJ | 04 | 0020 | 312.09/314.35 | FSK |
| 5 | LT20-05J2 | 05 | 5691 | 314.35 | FSK |
| 6 | LT20-06IO | 06 | 0120(5buttons) | 312.50/314.00 | FSK |
| 7 | LT20-07NJ | 08 | 0410 | 312.09/314.35 | FSK |
| 8 | LT20-08NJ | 08 | 0440(Toyota) | 312.09/314.35 | FSK |
| 9 | LT20-09NJ | 07 | 0440(Lexus) | 312.09/314.35 | FSK |
| 10 | LT20-10A0 | 06 | 5380 | 433.92 | ASK |
| 11 | LT20-11C0 | 04 | 7930 | 315.12 | ASK |
| 12 | LT20-12A1 | 02 | 7000D | 433.92 | FSK |
| 13 | LT20-13IO | 06 | 0120(6buttons) | 312.50/314.00 | FSK |

Functions of LT20 series boards

| Items | Functions | K518 series | KH100P |
|-------|--|-------------------------------------|-------------------------------------|
| 1 | Can be got version information of by. | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 2 | Can be read button functions by. | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 3 | Button's functions can be converted . | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 4 | Can be unlocked by K518 and KH100P. | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 5 | Can be up-graded by. | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 6 | Frequency can be modified by. | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 7 | Copy smart key by K518, KH100P negative. | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 8 | Can be converted SW model by. | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 9 | Remote counting data can be modified. | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 10 | Emergency key can be generated. | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |

Questions from our partners

- Should I worry about that the LT20 series new boards dont fit the currently shell for Toyota or Lexus?
No need to worry about that. new LT20 series have 12 board items as showing above.
- Does LT20-08NJ can replace the FT02-PH0440?
Not exactly. For now LT20 series does not has the function of generating smart key.
- Would FT series boards continue producing?
Yes, continue.
- I ve ordered 3370which belong to our FT series before, now what new product number of LT20 series should I order if it would be had same board item and same function?
LT20-01J0, it has same board items with 3370, meanwhile has more functions than it. AND it can be converted to be 0140B/D,5290B/D,A433D,F433D. of course, they have same board items, anyone of you would be more convenient.
- LT20 series including 7000D for Subaru?
not yet. you can wait, ASAP.
- I bought lots of 8A universal smart key boards P0020B from Lonsdor before, which product number of LT20 series should I order to have same fuctions and more profitable, stable quality than vv38?
Believe me, FT20-04NJ