


#### The operation processing for adjusting cluster (IC) via ICP method


(Take 5SER E60 for an example :)

① Divide the cluster from vehicle:




2 After divided, pls connect the cables according to the wiring diagram we offered.

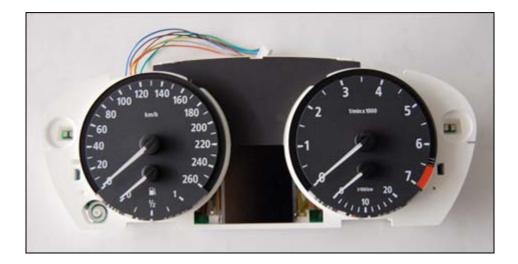


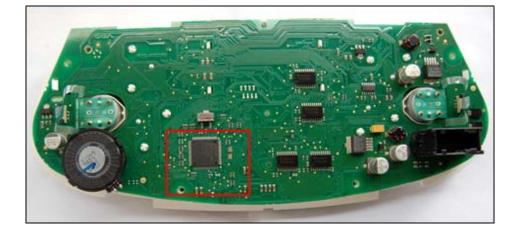




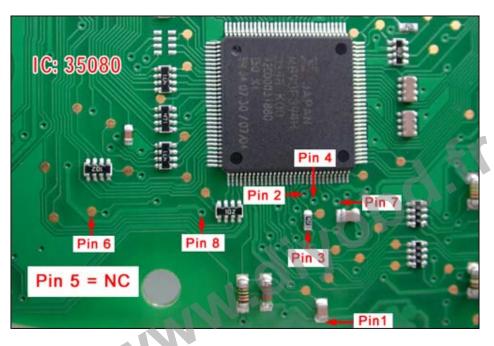


③ Finished the wiring connection, pls continue to exactly link to ICP and digimaster II body.

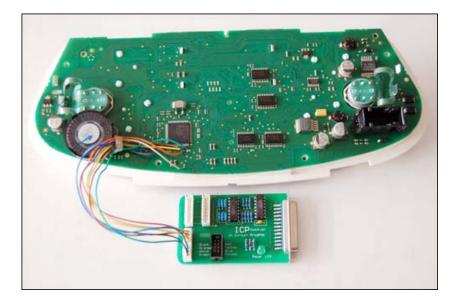

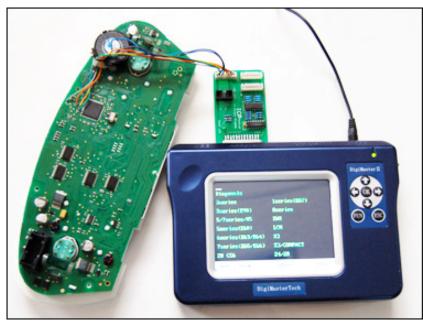





(4) Choose the vehicle  $\rightarrow$  pattern  $\rightarrow$ IC, read data  $\rightarrow$ save $\rightarrow$ adjust

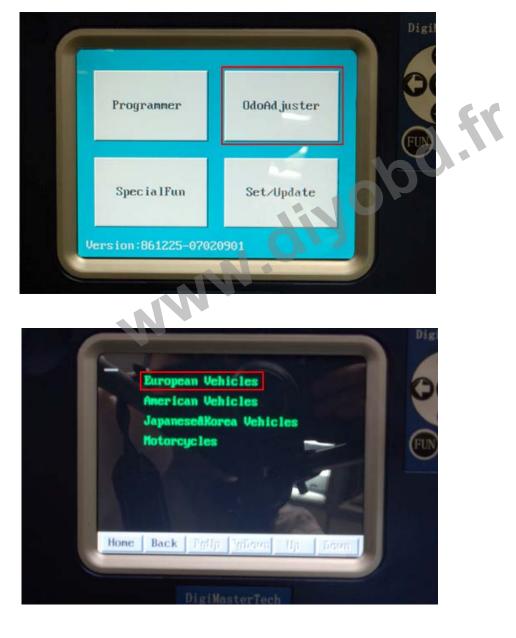






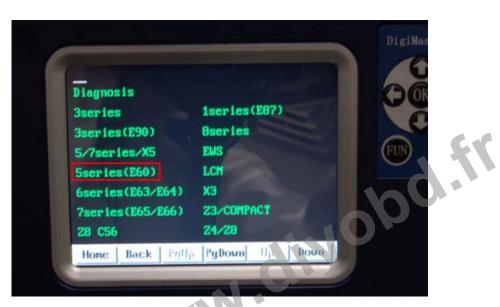

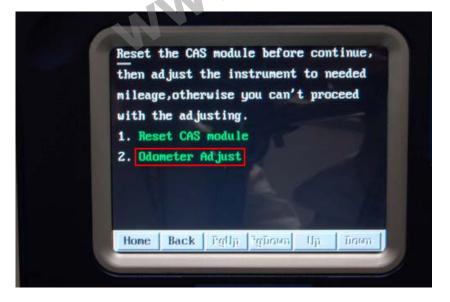

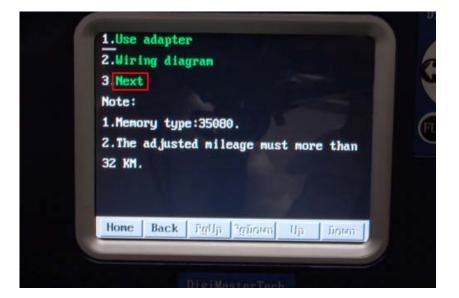



1070 E5A0 0F0F	Ja	UC.								10 05 FF	14	S
FFFF	Fil	leNm	: [							FF FF	FF	
FFFF 554F			-							4E4	ŧE	6
0582			-	ĸ		Car	nce			500 4A1		
7401		10 6	300	E10		RAI	70		DDD	180		
0	1 2	3	4	5 6	2	8	9	A	B			
CI	) E	F	G	HI	J	K	L	M	H	Del		
0 1	° Q	R	S	TU	U	W	X	Y	2			
-					1							
										-		

107					· 1		-		TO	10	101	0 107
E5f		Sau	e							_		051
OF				-					_		_	FFF
FFI		Fil	eNr	n :	BMW	E60	1					FFF
FFI				Ľ	-	_	-				_	FFF 4E4
FFI 554												500
05				-			÷ .					461
74					OK		1	Car	ce	Ļ.		180
70		190		130	0 F	100	3	101	70	A1		5 020
0	1	2	3	4	5	6	?	8	9	Ĥ	B	
С	D	E	F	G	H	I	J	K	L	M	N	Del
	P	Q	R	1'S	T	U	U	IJ	X	Y	2	

107 E5f		Pro	mpt	ţ								1070
0F0 FF1 FF1 554 051	OF FF FF 4B B2	S	ave	f f	i le		! ЭК	1				FFFF FFFF 4E4E 500A 4A14 1801
74		190	A F	30	a P	100	31	101	70	01	FFF	5 0202
0	1	2	3	4	5	6	7	8	9	A	B	
C	D	E	F	G	Н	Ι	J	К	L	M	N	Del
0	P	Q	R	'S	T	U	U	W	X	Y	2	







ESAC	ompt		0514
	Write data suc	cess!	FFFF
FFFF FFFF			FFFF 4E4E
554B 0582	ОК	-	500A 4A14
740B	00 6300 E100 3	801 7001	1801 FFF5 0202
Addr :0			

(5) Disconnect the wiring after adjusting completed, re-install cluster to vehicle.